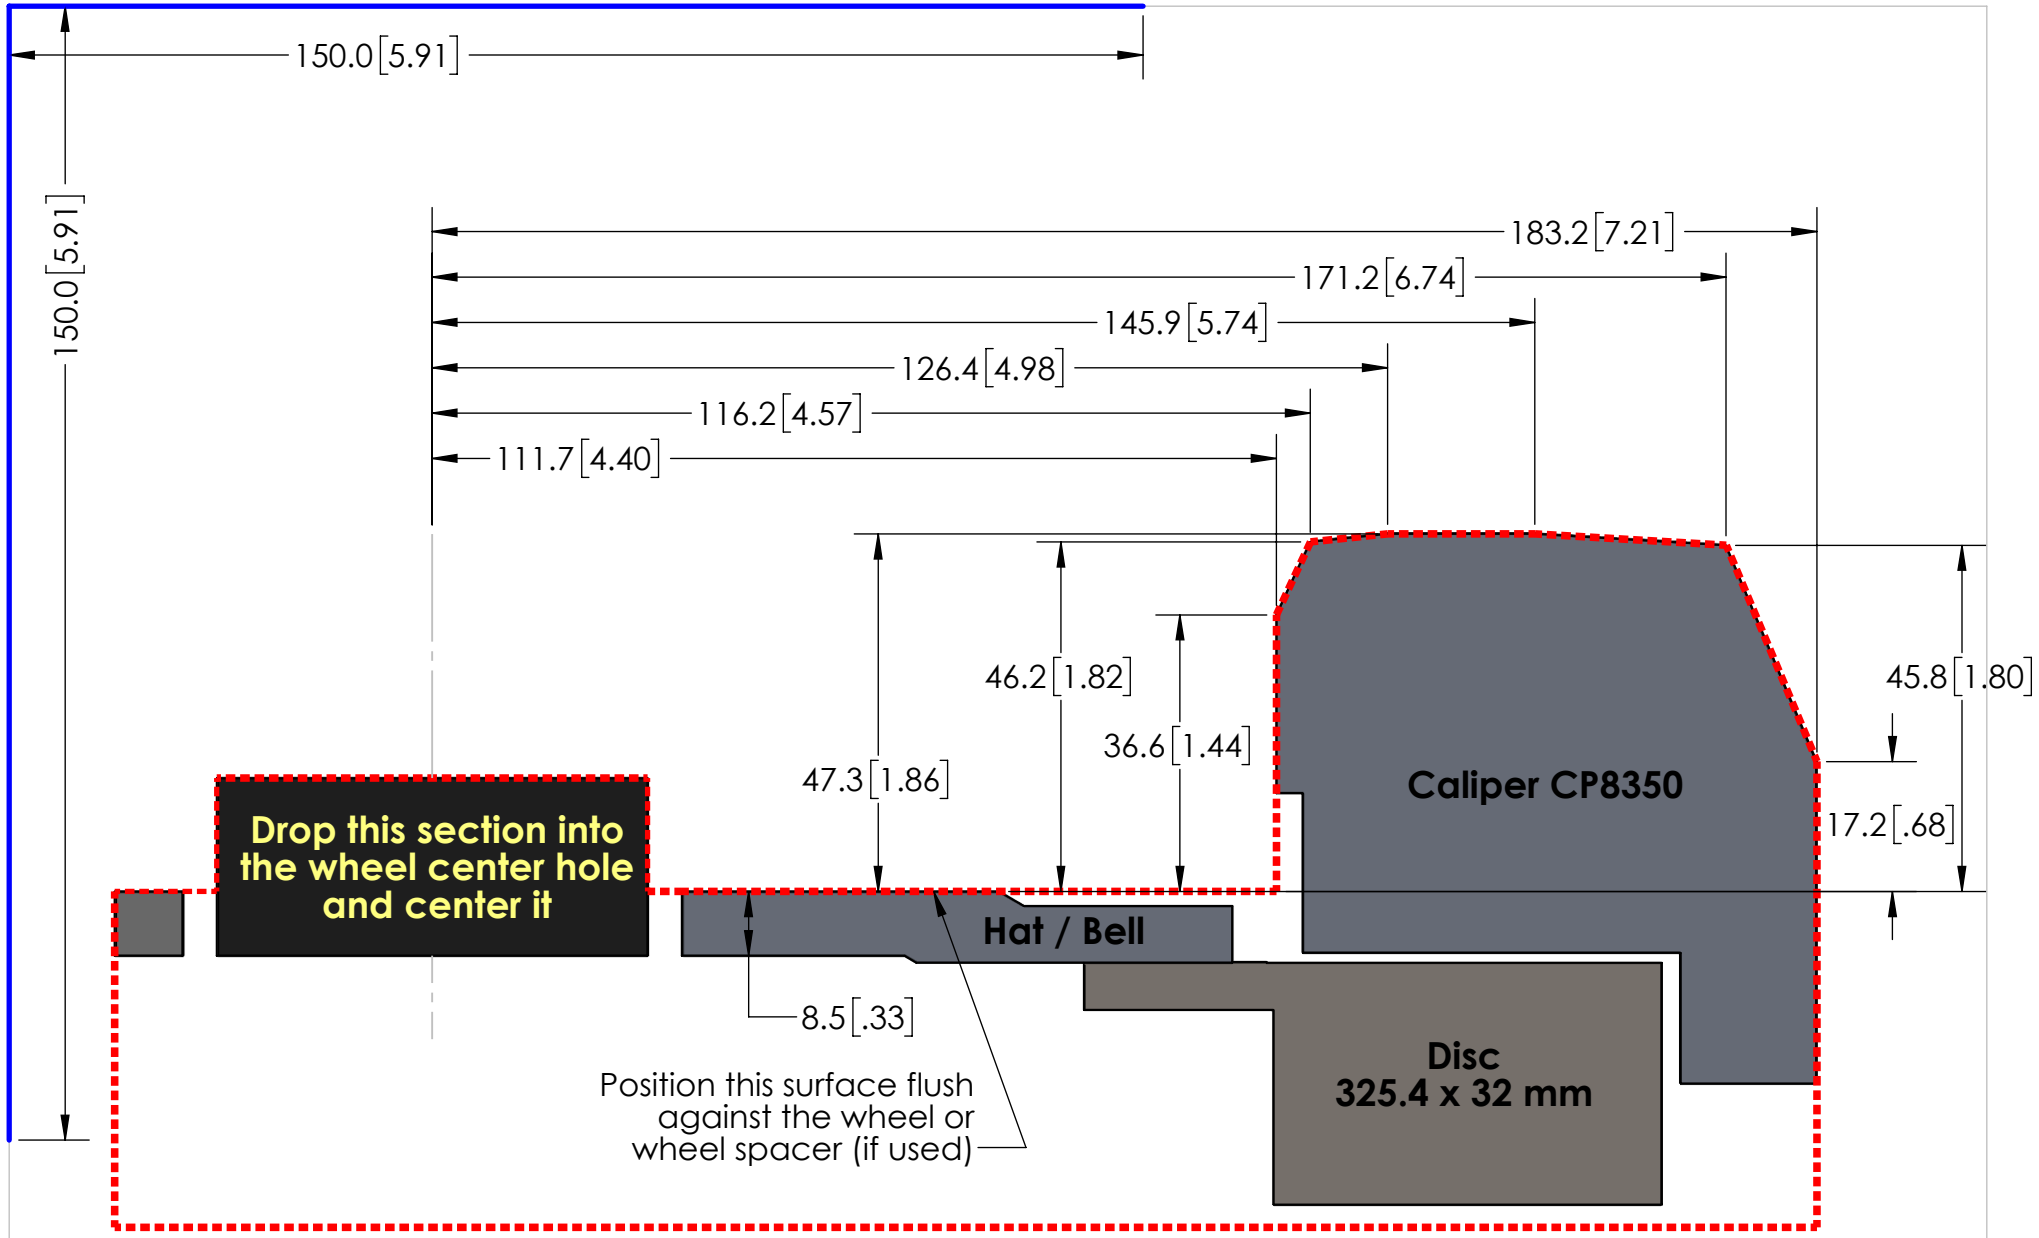


Instructions:

1. Print out and confirm the scale in both directions.
2. Cut out along the outer dotted lines.
3. Optional: Attach to a more rigid surface such as cardboard.
4. Place the template against the inside of the wheel making sure that the hat/bell surface sits flush against the wheel or, if used, wheel spacers.
5. A minimum of 2.5 mm [.10 in.] clearance is recommend to account for wheel and suspension component flex.

Wheel Clearance Template BMW E30 NON-M, FRONT, CP8350 caliper, 325.4 mm disc	essex parts services, inc. www.essexparts.com
Essex package no. 13.01.10229 (E30 non-M3)	DWG. NO. 2396 REV

5 4 3 2 1