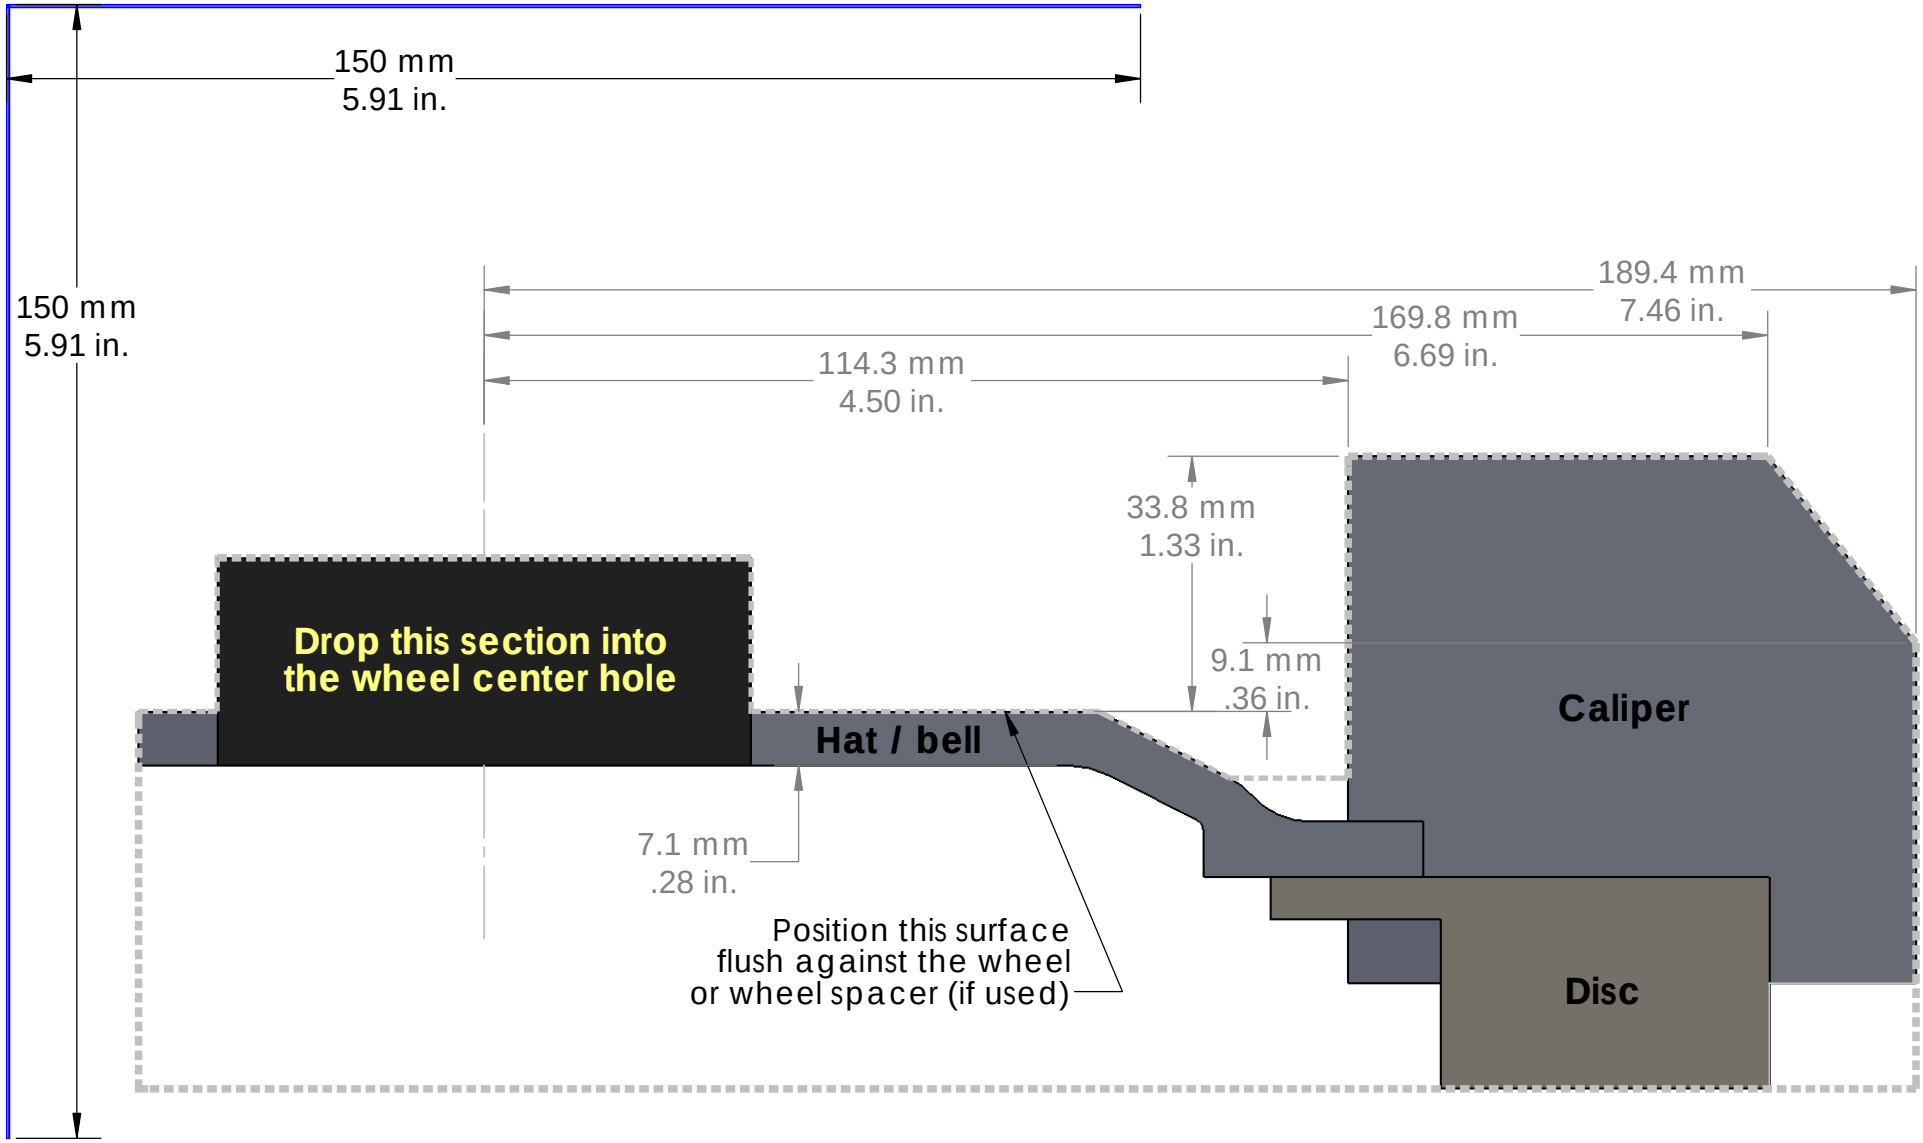

Instructions:

1. Print out and confirm the scale in both directions.
2. Cut out along the outer dotted lines.
3. Optional: Attach to a more rigid surface such as cardboard.
4. Place the template against the inside of the wheel making sure that the hat/bell surface sits flush against the wheel or, if used, wheel spacers.
5. A minimum of 2.5 mm (.10 in.) clearance is recommend to account for wheel and suspension component flex.

Wheel Clearance Template Corvette C5 and C6 rear Competition brake package	essex parts services, inc. www.essexparts.com
Essex package no. 13.01.10013 13.01.10014	DWG. NO. 1390 REV

5 4 3 2 1