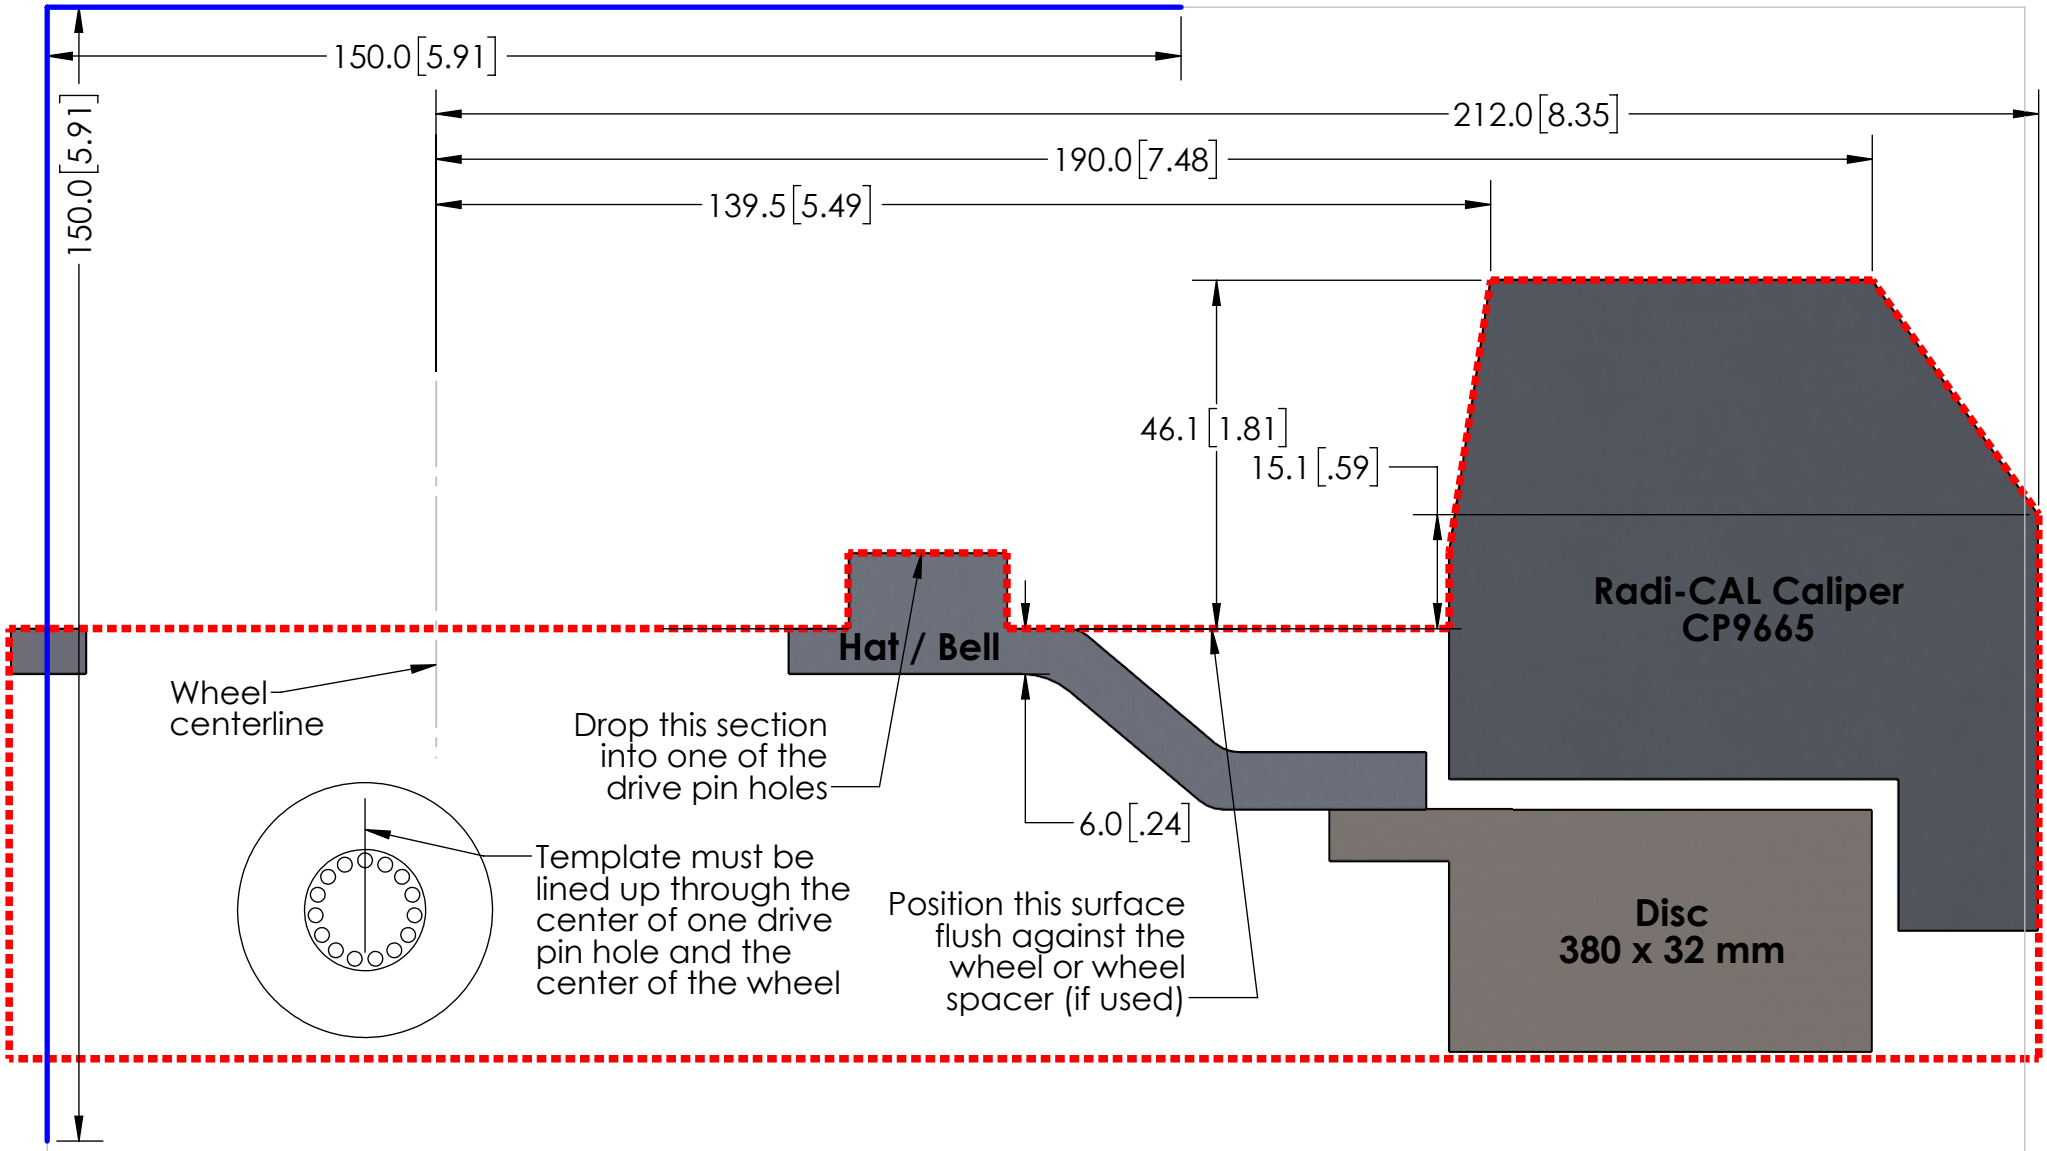

Instructions:

1. Print out and confirm the scale in both directions.
2. Cut out along the outer dotted lines.
3. Optional: Attach to a more rigid surface such as cardboard.
4. Drop the boss into one of the wheel drive pin holes.
5. Place the template against the inside of the wheel making sure that the hat/bell surface sits flush against the wheel or, if used, wheel spacers.
6. Align through the center of a drive pin hole and the wheel center as shown.
7. A minimum of 2.5 mm [.10 in.] clearance is recommend to account for wheel and suspension component flex.

Wheel Clearance Template Radi-CAL Competition Package Porsche 992.1 GT3 Cup, Front CP9665 caliper, 380 mm disc	essex parts services, inc. www.essexparts.com
Essex package no. 13.01.10219	DWG. NO. 2388 REV

5 4 3 2 1