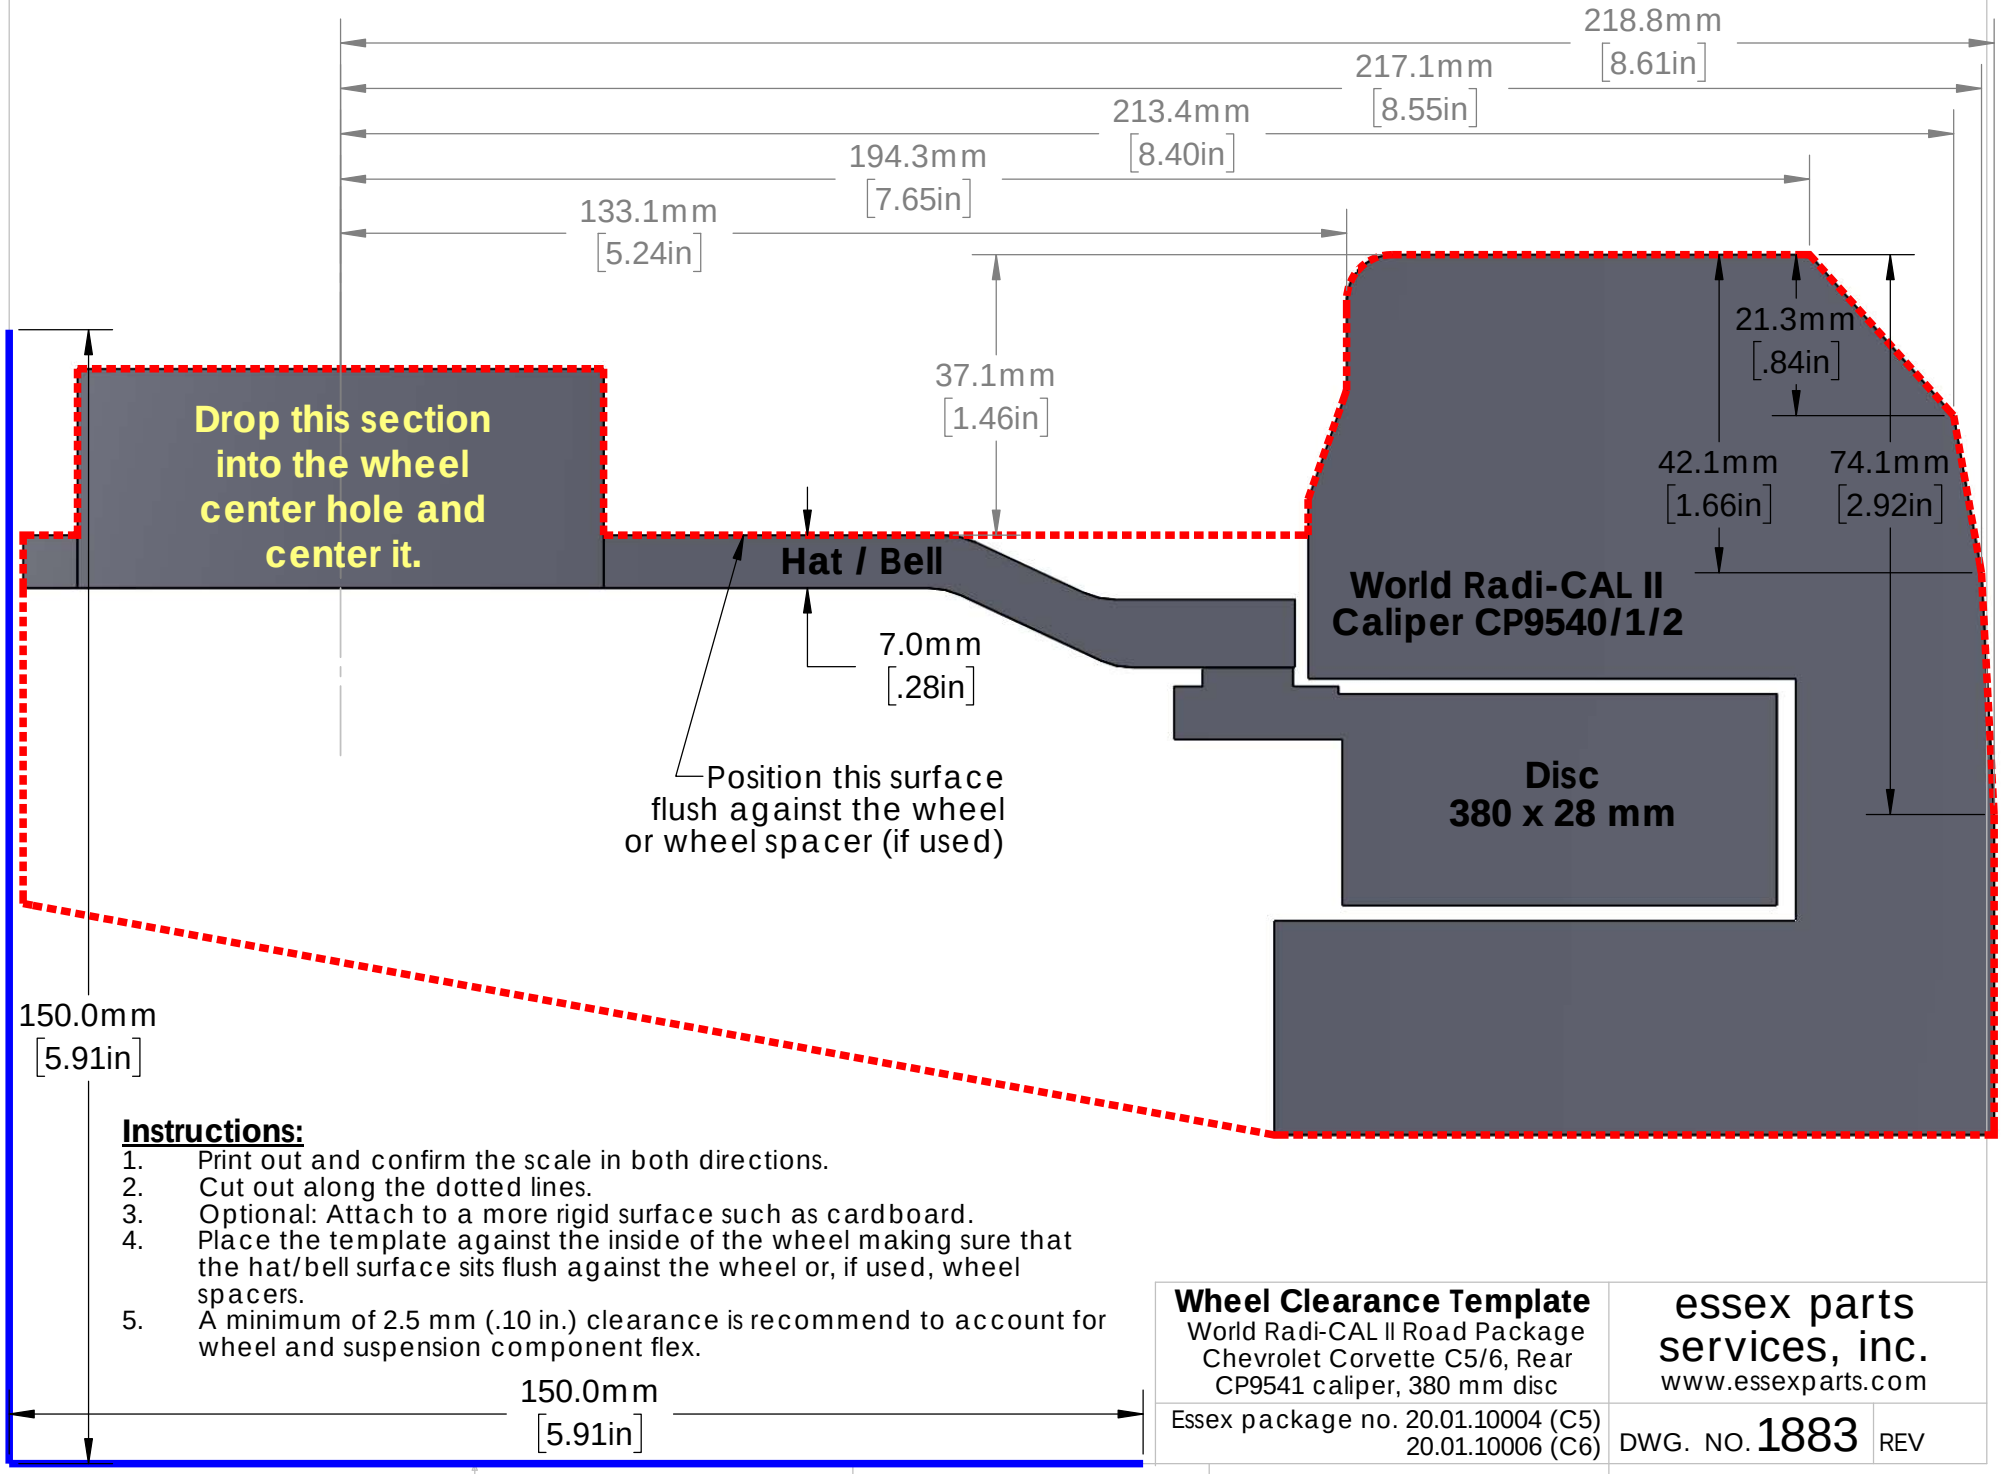

Instructions:

1. Print out and confirm the scale in both directions.
2. Cut out along the dotted lines.
3. Optional: Attach to a more rigid surface such as cardboard.
4. Place the template against the inside of the wheel making sure that the hat/bell surface sits flush against the wheel or, if used, wheel spacers.
5. A minimum of 2.5 mm (.10 in.) clearance is recommend to account for wheel and suspension component flex.

Wheel Clearance Template World Radi-CAL II Road Package Chevrolet Corvette C5/6, Rear CP9541 caliper, 380 mm disc	essex parts services, inc. www.essexparts.com
Essex package no. 20.01.10004 (C5) 20.01.10006 (C6)	DWG. NO. 1883 REV

5 4 3 2 1